



www.tefal.com

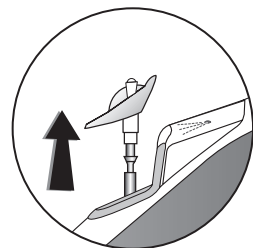 
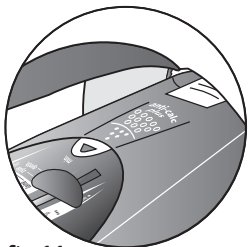 
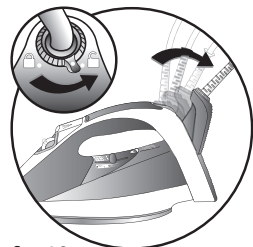 


fig.10

fig.11

fig.12

- into an earthed electrical socket. Connecting to the wrong voltage may cause irreparable damage to the appliance and will invalidate your guarantee. If you are using a mains extension lead, ensure that it is correctly rated (16A) with an earth, and is fully extended.
- Completely unwind the power cord before plugging into an earthed socket.
 - The soleplate of your iron can reach extremely high temperatures, and can cause burns: do not touch them. Never touch the electrical power cords with the soleplate of the iron.
 - Your appliance emits steam, which can cause burns. Always handle the iron with care, especially when ironing vertically. Never direct the steam towards people or animals.
 - Never immerse your steam iron in water or any other liquid. Never place it under a running tap.
 - The plug must be removed from the socket-outlet before the water reservoir is filled with water.

PLEASE RETAIN THIS INSTRUCTION BOOKLET FOR FUTURE REFERENCE

Environment protection first !

- ① Your appliance contains valuable materials which can be recovered or recycled.
- ➔ Leave it at a local civic waste collection point.

Description

- | | |
|---|---|
| 1. Spray nozzle | 11. Water tank opening button |
| 2. Anti-scale valve | 12. Water tank filler flap |
| 3. Steam control | 13. Integral anti-scale system (depending on model) |
| 4. Spray Button | 14. Thermostat indicator light |
| 5. Turbo Button | Goes out when the temperature has been reached |
| 6. Auto-Stop safety warning light (depending on model) | 15. Thermostat control for choosing the ironing temperature |
| 7. Ergonomic grip (depending on model) | 16. Extra Stable heel |
| 8. Electric power cord | 17. Soleplate |
| 9. Lock-System ring to open and close the Ultracord system (depending on model) | |
| 10. Ultracord System (depending on model) | |

Before first use

- Before using your iron with the steam function for the first time, we recommend that you operate it in a horizontal position for a few moments, away from your linen. Under the same conditions, press the Turbo button (fig.13).
- During the first few uses, a harmless odour and smoke may be given off. This has no effect on the use of the iron and will disappear quickly.

Please read these instructions carefully. Remove any labels from the soleplate before heating up the iron.

Anti-drip function (depending on model)

- When using the iron for the first time, allow 2 minutes for steam to be produced.
- If the soleplate temperature is too low, the iron will not produce steam because of the anti-drip technology which prevents droplets of water leaking from the soleplate.

Maintenance and cleaning

Cleaning the anti-scale valve (once a month)

- Unplug your iron and empty the water tank.
- To remove the anti-scale valve, pull it up – fig.13.
- Soak the valve in a cup of white spirit vinegar or plain lemon juice for hours – fig.14.
- Rinse the valve under running water.
- Replace the anti-scale valve.

Be careful !
- Never touch the end of the valve.
- The iron will not function without the anti-scale valve.

Self-cleaning

- The self-cleaning function helps to slow down scaling in your iron.
- In order to extend the life of your iron, use the Self-Cleaning function once a month.
- Fill the tank of your iron with untreated tap water. Stand the iron on its heel with the thermostat set to "Max" and heat it up.
 - When the thermostat light goes out, unplug the iron and hold it in a horizontal position, over a sink. Remove the anti-scale valve – fig.13.
 - Shake the iron gently, over the sink, until some of the water in the water tank (with the impurities) has flowed out through the soleplate – fig.15.
 - At the end of the operation, push the anti-scale valve back into position.
 - Unplug the iron, and when the soleplate is just warm, wipe it with a soft cloth.

 
Cleaning the soleplate

- While the soleplate is still slightly warm, clean it by wiping over it with a damp non-metallic cloth.

Never use abrasive or aggressive products on the soleplate.

Storing your iron

- Unplug the iron and wait for the soleplate to cool down.
- Close the Ultracord System and lock it by positioning the ring indicator (depending on model) onto (fig.16).
- Empty the water tank and set the steam control to "0". A little water may remain in the tank.
- Wind the cord around the heel at the back of the iron. Store the iron on its heel – fig.16.

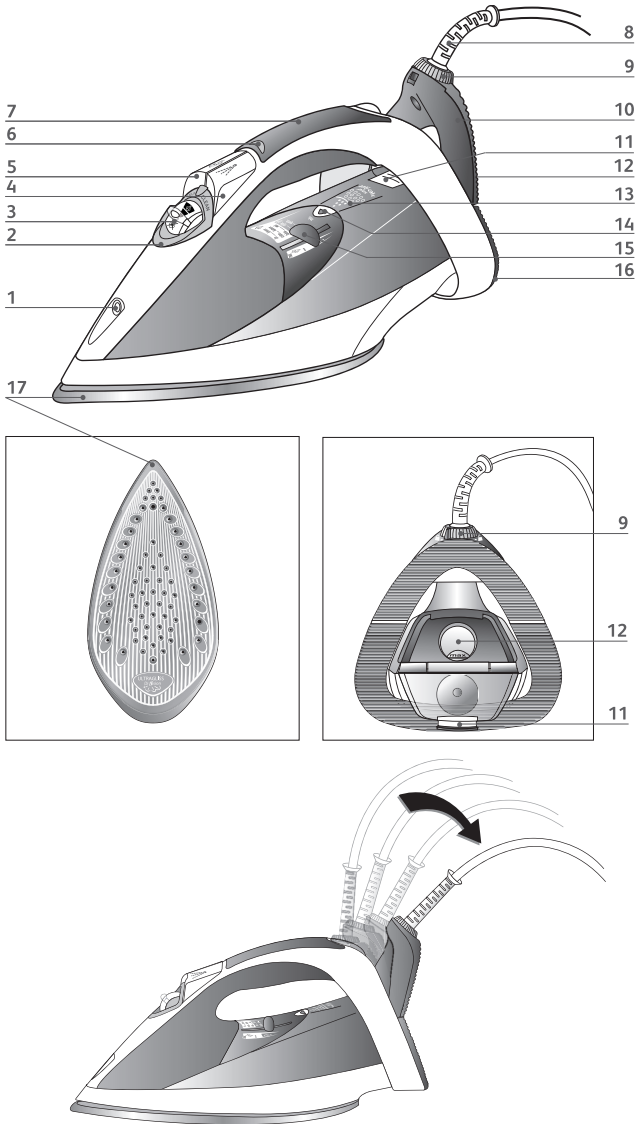

EN

Important safety recommendations

- Please read these instructions carefully before first use. This product has been designed for domestic use only. Any commercial use, inappropriate use or failure to comply with the instructions, the manufacturer accepts no responsibility and the guarantee will not apply.
- Never unplug the appliance by pulling the power cord. Always unplug your appliance: before filling the water tank or rinsing the water tank, before cleaning the appliance, after each use.
- The appliance must be used and placed on a flat, stable, heat-resistant surface. When you place the iron on the iron rest, make sure that the surface on which you place it is stable.
- This appliance is not intended to be used by persons (including children) with reduced or impaired physical, sensory or mental capacities or persons lacking appropriate knowledge or experience, unless a person responsible for their safety provides either supervision or appropriate instructions concerning use of the appliance prior to its use.
- Children should be supervised to ensure they do not play with the appliance.
- This appliance may be used by children aged 8 or over and persons lacking appropriate knowledge or

Preparation

What water to use ?

- Your appliance has been designed to operate using untreated tap water. However, it is necessary to operate the Self-Clean function regularly in order to eliminate hard water deposits from the steam chamber.
- Heat concentrates the elements contained in water during evaporation. The types of water listed below contain organic waste or mineral elements that can cause spitting, brown staining, or premature wear of the appliance: water from clothes dryers, scented or softened water, water from refrigerators, batteries or air conditioners, pure distilled or demineralised water or rain water should not be used in your Tefal iron.

If your water is very hard, it is possible to mix tap water with store-bought distilled or demineralised water in the following proportions :
- 50% tap water,
- 50% distilled or demineralised water.




Filling the water tank

- Fill the tank up to the "MAX".
Never fill the appliance by holding it directly under the tap.
- Check that the Ultracord system is properly locked.
 - Unplug your iron before filling it.
 - Set the steam control to "0" – fig.1.
 - Take the iron with one hand and tilt it slightly, with the nose of the soleplate pointing down.
 - To open the flap of the water tank, push the button – fig.2.
 - Fill the tank up to the "MAX" line – fig.3.
 - Close the flap of the water tank, until it clicks into place.

Use

Adjust the temperature and the steam

- Set the thermostat control – fig.4, referring to the table below.
- The thermostat light comes on. It will go out when the soleplate is hot enough – fig.5.

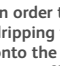FABRIC	POSITION OF THERMOSTAT CURSOR	STEAM SETTING POSITION
LINEN COTTON WOOL SILK SYNTHETIC (Polyester, Acetate, Acrylic, Nylon)	MAX ••• •• •	  

RECOMMENDATIONS

- Your iron heats up quickly: so begin by ironing fabrics that are ironed at low temperatures first, then go on to those requiring a higher temperature.
- If you turn down the thermostat, wait until the thermostat light comes back on before beginning to iron again.
- When ironing fabrics with mixed fibres, set the ironing temperature for the most delicate fibre. For delicate fabrics we recommend testing the fabric first on an inconspicuous place eg (inside the hem).

In order to avoid water dripping from the iron onto the linen:
- Turn off the steam when ironing silk or synthetic fabrics.
- Set it at the minimum position for wool.

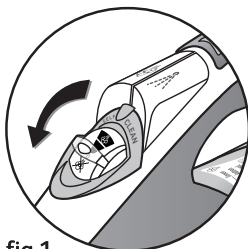 


fig.1

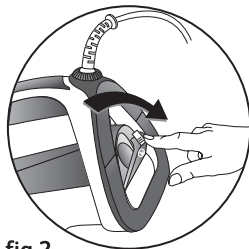 


fig.2

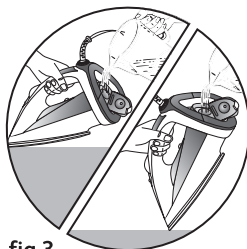 


fig.3

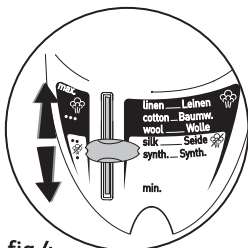 


fig.4

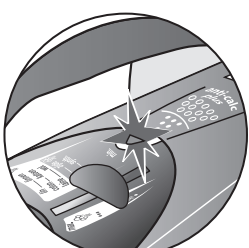 


fig.5

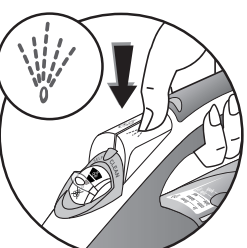 


fig.6



fig.7



fig.8

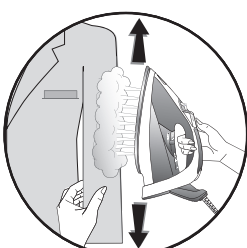 


fig.9

- experience or persons with reduced or impaired physical, sensory or mental capacities provided that they have been thoroughly instructed regarding use of the appliance, are supervised, and understand the risks involved. Children must not be allowed to play with the appliance. Cleaning and maintenance must not be carried out by children unless they are aged 8 or over and are supervised. Keep the appliance and power cord out of the reach of children under 8 years of age.
- The surfaces of your appliance can reach very high temperatures when functioning, which may cause burns. Do not touch the hot surfaces of the appliance (accessible metal parts and plastic parts adjacent to the metallic parts).
- Never leave the appliance unattended :
 - when it is connected to the mains,
 - until it has cooled down (around 1 hour).
- The appliance must not be used if it has been dropped, if it has any visible damage, if it leaks, or if it functions abnormally in any way. Do not attempt to dismantle your appliance: have it examined at an Approved Service Centre to avoid any danger.
- Check the electrical power for sign of wear or damage prior to use. If the electrical power cord is damaged, it must be replaced at an Approved Service Centre to avoid any danger.

- For your safety, this appliance conforms to all applicable regulations (Low Voltage Directive, Electromagnetic Compatibility, Environment, etc).
- Your steam iron is an electrical appliance: it must be used under normal conditions of use. It is designed for domestic use only.
- Always plug your steam iron:
 - into a mains circuit with voltage between 220 V and 240 V.

Spray Function (spray)

- Whether steam or dry ironing, you are able to use the spray button to dampen laundry to remove stubborn creases – fig.6.

Obtain more steam

- Press the Turbo button (fig.11) from time to time – fig.7.
- Wait a few seconds between each shot before pressing the Turbo button again..

Vertical steam ironing

- Hang the garment on a hanger and hold the fabric slightly taut with one hand. The steam is very hot, so you should always do this with the garment on a hanger – never iron clothes which someone is wearing.
- Set the thermostat control to "MAX" – fig.8.
- Press the Turbo button (fig.11) repeatedly – fig.7 moving the iron from top to bottom – fig.9, wait a couple of seconds between each use of the button.

Dry ironing

- Set the temperature for the fabric to be ironed.
- Set the steam control to "0" – fig.1.
- You may start ironing when the thermostat light goes out.

Extra Functions

Ultracord System (depending on model)

- Your iron has been designed with the Ultracord system to prevent the steam cord from dragging across the linen and creasing it while ironing. It also allows you to handle the iron more easily. To use the Ultracord system:
- Turn the Lock-System ring and put the indicator on the (fig.10) position – fig.10.
 - The Ultracord system opens out automatically. You can now plug in your appliance and begin to iron.
 - Each time you put your iron on its heel, the Ultracord system closes automatically and opens out each time you pick the iron up again.

For easier use, always use the Ultracord system.

Integral anti-scale system (depending on model)

- Your iron is equipped with an integral anti-scale system – fig.11. This system will help to provide:
- a better ironing quality with a constant flow of steam,
 - lasting performance from your appliance.

Auto-Stop safety feature (depending on model)

- The electronic system cuts off the electric power and the Auto-Stop warning light flashes if the iron is left vertically on its heel for more than 8 minutes, or in a horizontal position for more than 30 seconds – fig.12.
- To restart the iron, just move it gently until the warning light stops flashing.

When the Auto-Stop warning light is on, it is normal for the thermostat light to remain off.

If there is a problem

PROBLEM	POSSIBLE CAUSES	SOLUTIONS
There is little or no steam..	The water tank is empty.	Fill the water tank.
	The anti-scale valve is dirty.	Clean the anti-scale valve.
	Your iron has a build-up of scale.	Clean the anti-scale valve and carry out a selfclean.
	Your iron has been used dry for too long.	Carry out a self-clean.
The soleplate is scratched or damaged.	You have placed your iron flat on a metallic rest-plate or ironed over a zip.	Always set your iron on its heel.
Water is running out of the water tank flap.	You have not closed the water tank flap properly.	Check that the water tank flap is locked properly (until you hear a "click").
Steam or water leak from the iron as you finish filling the tank.	The steam control is not set to the "0" position.	Check that the steam control is set to the "0" position.
The spray does not spray.	There is not enough water in the water tank.	Fill up the water tank.

PROBLEM	POSSIBLE CAUSES	SOLUTIONS
There is little or no steam..	The water tank is empty.	Fill the water tank.
	The anti-scale valve is dirty.	Clean the anti-scale valve.
	Your iron has a build-up of scale.	Clean the anti-scale valve and carry out a selfclean.
	Your iron has been used dry for too long.	Carry out a self-clean.
The soleplate is scratched or damaged.	You have placed your iron flat on a metallic rest-plate or ironed over a zip.	Always set your iron on its heel.
Water is running out of the water tank flap.	You have not closed the water tank flap properly.	Check that the water tank flap is locked properly (until you hear a "click").
Steam or water leak from the iron as you finish filling the tank.	The steam control is not set to the "0" position.	Check that the steam control is set to the "0" position.
The spray does not spray.	There is not enough water in the water tank.	Fill up the water tank.

If you have any problem or queries, please contact our Helpline:
0845 602 1454 - UK / (01) 461 0390 - Ireland
or consult our website - www.tefal.co.uk